Easy Equipment

Vogue Deep Fat Fryer Safety Sign W198

100(H) x 300(W)mm

Code : W198



Deep Fat Fryer Switch off/disconnect power supply at mains before cleaning. Avoid filling pan beyond recommended oil level. Ensure food is dried before immersing in oil to prevent frothing and subsequent overflowing. Always return thermostat control to zero when frying is completed.

41% OFF Sale

£10.23

£5.99 / exc vat

£7.19 / inc vat

Select Shipping Method

- Next Working Day delivery

Notes :

- Please check door entry sizes before ordering.
- Delivery is made to kerbside only.
- Drivers do not unpack or position goods.A 25% restocking charge will apply for all returned goods.

This essential catering sign is ideal for kitchens and food preparation areas, displaying important safety advice for staff when using the deep fat fryer.

Showing clear signs and guidance for use of this machine not only protects your staff from accidents but also prevents waste through inefficient operation and helps to protect your equipment from misuse.

- Self adhesive
- · Easy to clean
- Highly visible
- Creates awareness of associated risks
- Protects your staff from accidents
- Protects your equipment from damage
- 100(H) x 300(W)mm
- Material : Vinyl

EasyEquipment make every reasonable effort to ensure the accuracy and validity of the information provided on its web and PDF pages.

However, as product information, technical details and prices are continually changing, EasyEquipment reserve the right to change at any time without notice, information contained on its website and make no warranties or representations as to its accuracy. EasyEquipment © 2024, All rights reserved. E&OE. Page printed on "06-05-2024" at "23:29:07"