Easy Equipment

66 Jersey Street,Manchester, M4 6JW, UK | VAT: GB606624256 sales@easyequipment.com / 0333 3443 979

Vogue Dishwasher Machine Safety Sign W199

100(H) x 300(W)mm

Code: W199

View Product



Dishwashing Machine

Switch off/disconnect power supply at mains before cleaning. Avoid overloading machine. If machine jams or stops, immediately switch off power and water supply and examine cause of stoppage. Allow machine to cool before reaching in otherwise serious scalds could occur.



£2.27

£1.16 / exc vat

£1.39 / inc vat

Select Shipping Method

- Next Working Day delivery

Notes:

- Please check door entry sizes before ordering.
- Delivery is made to kerbside only.
- Drivers do not unpack or position goods.
- A 25% restocking charge will apply for all returned goods.

This kitchen sign displays guidance for the correct operation of a commercial dishwashing machine, to minimise risks to your staff and also prevent damage to your equipment.

The self adhesive sign is easy to fix to the wall at eye level for all employees to see clearly, with concise instructions which are easy to follow.

- · Self adhesive
- · Easy to clean
- Highly visible
- · Keeps staff informed
- Protects your kitchen equipment and tableware from damage
- · Minimises accidents
- 100(H) x 300(W)mm
- · Material: Vinyl

EasyEquipment make every reasonable effort to ensure the accuracy and validity of the information provided on its web and PDF pages.

However, as product information, technical details and prices are continually changing, EasyEquipment reserve the right to change at any time without notice, information contained on its website and make no warranties or representations as to its accuracy. EasyEquipment © 2024, All rights reserved. E&OE. Page printed on "27-04-2024" at "22:07:13"