

Caterlite

Spice / Coffee Grinder Instruction Manual



Model

CK686

Safety Tips

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components on this product.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT immerse the appliance in water, or use jet/pressure washers to clean the appliance
- Do not use the appliance for anything other than its intended use.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Do not let cord hang over edge of table or hot surface
- Not suitable for outdoor use.
- Keep fingers away from moving parts

- Do not remove cover until blade has completely stopped
- Do not attempt to operate without the lid in place
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.
- If the power cord is damaged, it must be replaced by a CATERLITE agent or a recommended qualified technician in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of child less than 8 years.
- DO NOT use if damaged

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your CATERLITE product.

Pack Contents


The following is included:

- CATERLITE Spice/Coffee Grinder
- Instruction Manual

CATERLITE prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage.

Should you find any damage as a result of transit, please contact your CATERLITE dealer immediately

Know your Spice/Coffee Grinder

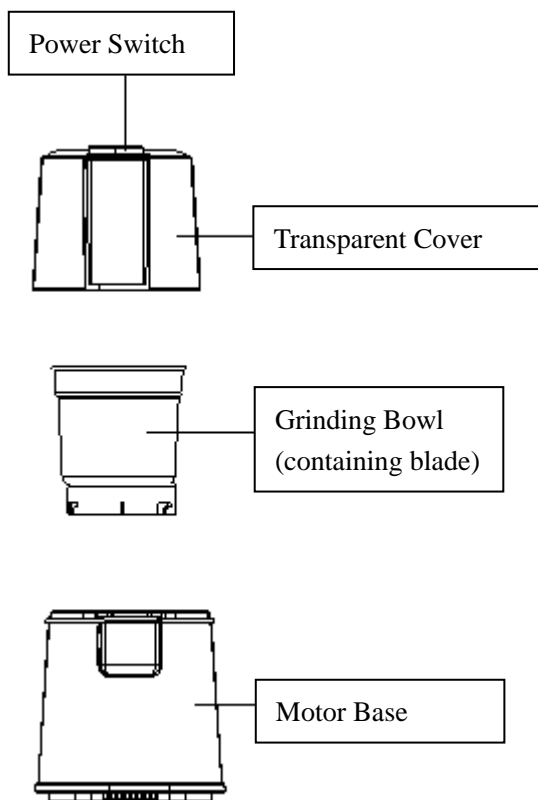

Before Use

Carefully unpack your coffee grinder and remove all packing materials. To remove any dust that may have accumulated during packaging, wipe the grinding bowl, blades with a damp lint-free cloth or sponge. Use extreme care as the blades are sharp. The transparent cover can be immersed in water for cleaning, dry thoroughly.

Caution: Never immerse the motor base in water for cleaning and do not fill the grinding bowl with water for cleaning.

Operation

1. Place the grinder on a flat surface.
2. Assemble the grinding bowl into the motor base, and then turn the bowl clockwise until a click sound is heard. When disassembling, turn the bowl anti-clockwise to detach it.
3. Pour dry spices or coffee beans into the grinding bowl, it must be noted the quantity of should not exceed 60g.
4. Attach the transparent cover and plug into the power outlet.
5. Press and hold the power switch, the appliance will start operating. Release the power switch, the appliance will stop operating.

NOTE: Do not operate this appliance continuously for more than 30 seconds, allow appliance to cool down for 3 minute between two continuous cycles.

6. View the consistency of ground product through the transparent cover.

IMPORTANT: If you want to remove the cover to check the consistency of the coffee grounds. It must be noted never remove the cover until blades come to a complete stop.

7. Once the desired grind is obtained, release power switch and unplug the power cord from the outlet.

Grinding Tips

This grinder can only grind dry, brittle foods. It will not grind anything moist, extremely hard, or gummy such as whole ginger, chocolate, sesame seeds or nutmeg. Never use the grinder to chop ice cubes.

Spices, freshly ground peppercorns etc may have a strong aroma and a taste that may affect the flavor of coffee beans ground afterward. You may want to purchase a separate grinder if you plan to grind coffee and spices.

Cleaning, Care & Maintenance

- **CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or motor base in water or liquid. After each use, always make sure plug is first removed from wall outlet.
- Wash cover with water and mild detergent. The cover is not dishwasher-safe. Rinse thoroughly and dry. Never immerse motor base or filling water into the grinding bowl.
- Wipe the grinding bowl, blades with a lint-free cloth. Extreme care should be exercised as the blade is sharp.

Trouble Shooting

Fault	Probable Cause	Action
The unit is not working	No power	Make sure the machine is plugged in correctly Check Power Supply
	Plug and lead damaged	Call Caterlite agent or qualified technician
	Internal wiring fault	Call Caterlite agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Cover not located correctly	Make sure cover located correctly

Technical Specification

Model	Voltage	Power	Current	Dimensions h x w x d mm	Weight (kg)
CK686	220-240v 50hz	180-220w	0.9A	209 x 123 x 124	1.16kg

Electrical Wiring

This appliance is supplied with a 3 pin, BS1363 plug and lead, with a 13 amp fuse as standard. The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area.

CATERLITE parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

CATERLITE products have been approved to carry the following symbol:



 
All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of CATERLITE. Every effort is made to ensure all details are correct at the time of going to press, however, CATERLITE reserve the right to change specifications without notice

DECLARATION OF CONFORMITY

- Conformanceverklaring • Déclaration de conformité • Konformitätserklärung • Dichiarazione di conformità •
• Declaración de conformidad • Declaração de conformidade

Equipment Type	Grinder
Model	CK686
Application of Council Directives(s)	LVD Directive 2006/95/EC EMC Directive 2004/108/EC RoHS Directive 2011/65/EU
Standards	EN60335-1:2012 EN60335-2-14:2006+A1:2008+A11:2012 EN62233:2008 EN55014-1:2006+A1:2009+A2:2011 EN55014-2:1997+A1:2001+A2:2008 EN61000-3-2:2006+A1:2009+A2:2009 EN61000-3-3:2013
Producer Name	Caterlite
Producer Address	Fourth Way, Avonmouth, Bristol, BS11 8TB United Kingdom

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Date	22/7/15
Signature	
Full Name	Richard Cromwell
Position	Commercial Director

Caterlite

CK686_UK_4